







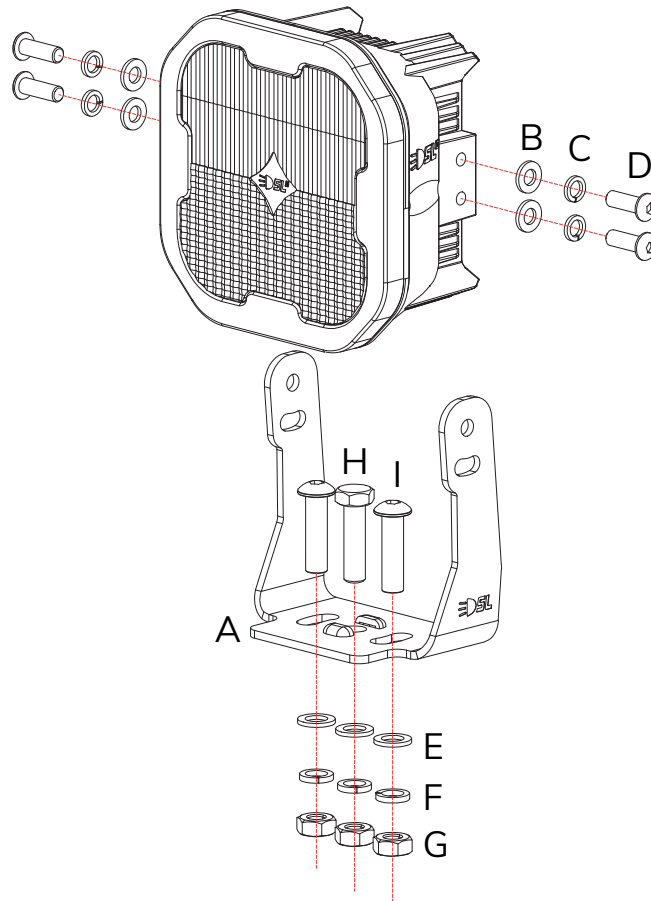

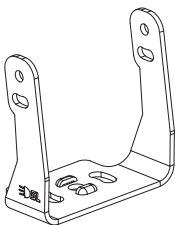

Kit includes

- Two (2) Sigma X5 Pod
- One (1) Deutsch wiring
- Mounting bracket and hardware
- Two (2) cover lamp



Mounting kit and hardware

 <p>A bracket</p>	 <p>B M6 Flat Washer</p>	 <p>D M6*18 Round Head Screw</p>	 <p>F M8 Spring Washer</p>	 <p>H M8*30 Round Head Screw</p>
	 <p>C M6 Spring Washer</p>	 <p>E M8 Flat Washer</p>	 <p>G M8 Nut</p>	 <p>I M8*30 Hex Screw</p>

Wiring

- Use the included wiring harness to make the connection

